



**MODEL** LS411COB  
**INSTALLATION TYPE** Adaptor Base  
**IP RATING** IP67  
**SUPPLY VOLTAGE** 110-277 V AC, 50/60 H  
**INSTRUCTIONS COVER** Single Colour, no dimming

## LS411COB Omnio Mini


N653

Warranty void if not installed as per installation instructions

DANGER

**ISOLATE LUMINAIRE FROM POWER**

Failure to isolate power supply before installation or maintenance may result in fire, serious injury, electric shock, death and may damage the luminaire.




**Luminaire Tilt**  
 Aim the Luminaire as desired and tighten this screw to lock luminaire tilt

**Luminaire Rotation**  
 Aim the Luminaire as desired and tighten screws to lock luminaire rotation. These screws also attach the luminaire body to the Adaptor Base.

**Electrical Connection**  
 Use wire nuts to connect luminaire to supply cable.

**Mains Voltage**

Wire Colour	Designation
Brown	Line
Blue	Neutral
Green	Earth

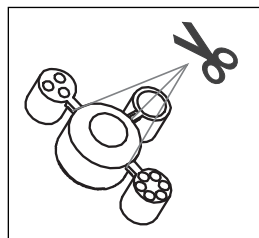

**Grommet**  
 Feed supply cable through appropriate grommet.

**Grommet Compression Plate**  
 Use to secure grommet

**Adaptor Base**  
 Feed supply cable through base and screw base to mounting surface.

**Supply Cable**  
 Run a 3-core supply cable from the luminaire to a suitable power source.

**Questions?**  
**Call +61 7 3286 2299**  
**Email [sales@lumascope.com.au](mailto:sales@lumascope.com.au)**  
**[www.lumascope.com.au](http://www.lumascope.com.au)**

---

## **SAFETY INSTRUCTIONS**

**WARNING - To reduce the risk of FIRE or INJURY:**

1. Luminaires and transformers to be installed by licensed electrical contractors.
2. Luminaires to be used for intended purpose only.
3. Do not operate the luminaires with a missing or damaged parts.
4. Use only genuine Lumascope parts to replace damaged or missing components.
5. Refer to instructions for installation and operating requirements.
6. Ensure installation complies with local regulations

**Voltage insulation test (megger) will permanently damage product and will void warranty.**

**SAVE THESE INSTRUCTIONS.**